
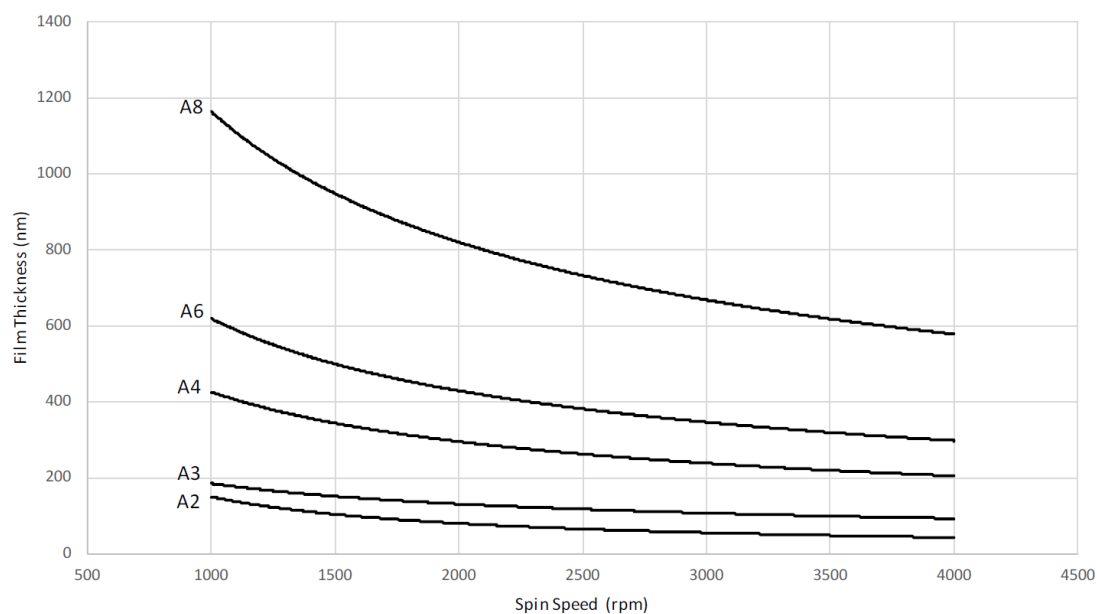


PMMA for EBPG recipe


Tone	Positive
Special	Also applicable for DUV use. Available in several concentrations and molecular weights
Reference	MicroChem
Spincoat	See spincurves below
Prebake	2 minutes on hotplate @175°C (for thicknesses < 500nm) or 30 minutes on hotplate @175°C (for thicknesses > 500nm)
Exposure	Clearance dose 600μC/cm ²
Development	60s in MIBK:IPA=1:3
Rinse	30s in IPA

Spincurve 950K PMMA in anisol

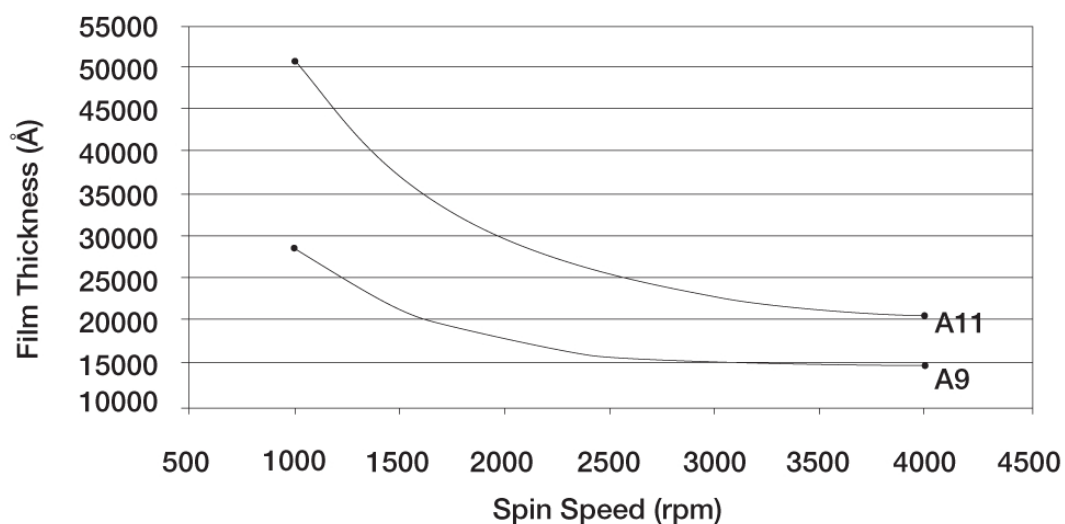

Spincurve 495K in anisol

495PMMA A Resists Solids: 8% - 11% in Anisole

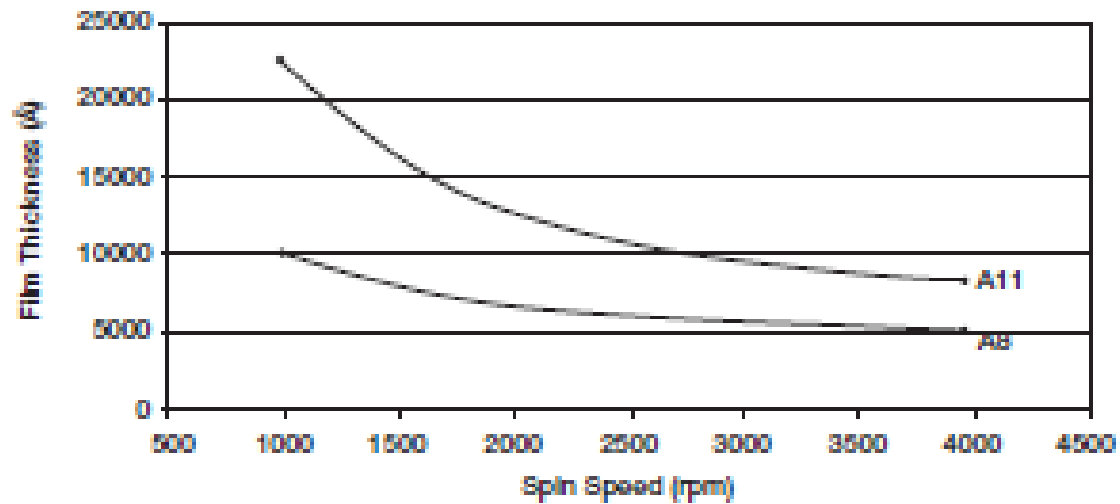

495PMMA A Resists Solids: 2% - 6% in Anisole

